


Setting up CCCAM home server

Server

Step 1. check IP of server

Network Local Setting	
DHCP	On
IP Address	192.168.001.120
Subnet Mask	255.255.255.000
Gateway	192.168.001.001
DNS Primary	192.168.001.001
DNS Secondary	000.000.000.000
App Selected	CCCAM

Step 2. Set „homeshare start,, to **On** and press bottom **Login** to start cccam home srver

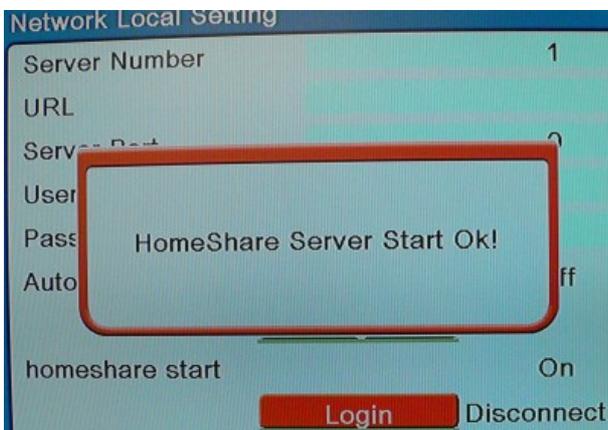

Client - this easy way you can connect up to 4 clients

Type in proper server IP
Set port to 8000
Use as login: 3
Use as password: 3
Set AutoConnect to: On

...and login to start work ;)

